


### ENCODER CONNECTIONS

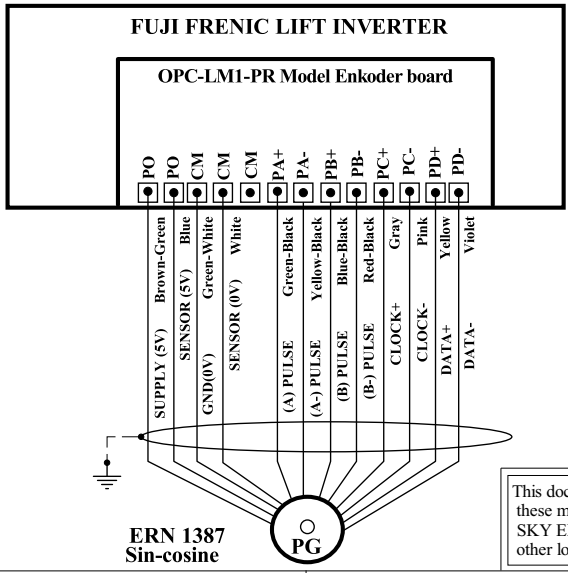

### FUJI FRENIC LIFT ENCODER PARAMETERS

- L01 : 5 / OPC-LM1-PR (ENKODER BOARD SECTION)
- L02 : ENCODER PULSE (....P/R)

F/7.5.5.02.21

This document is a sample for applications. All information contained in these materials are subject to change by SKY ELEVATOR without notice. SKY ELEVATOR assumes no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors.

FUJI FRENIC LIFT SERIES INVERTER OPERATION DIAGRAM			
SKY ELEVATOR	SERIES	FUJI	DRW. SKY
	PROJ.	FJ005	APPRV. SKY
	REV.	00	DATE 16 MAR 09